

Fire Extinguisher

Gauge should always register in the green zone; please contact Housing Supervisor at ext 8230 to have replaced if in the red zone.



Please read, familiarize yourself with, and follow the printed instructions. Always call 9-1-1 in an emergency.

Another typical style
flashlight for emergency
use.

 




Battery operated emergency lantern



Typical emergency flashlight

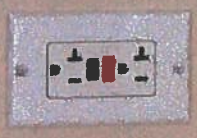

20.44



5-Year Limited Warranty

The Coleman Company, Inc. ("Coleman") warrants that for a period of five years from the date of original retail purchase, this product will be free from defects in material and workmanship. Coleman, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. No warranty is provided for batteries and lightbulbs. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Coleman dealers, service centers, or retail stores selling Coleman® products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

What This Warranty Does Not Cover

This warranty does not cover normal wear of parts, parts that are not genuine Coleman® parts, or damage resulting from any of the following: negligent use or misuse of the product; use on improper voltage or current; commercial use of the product; use contrary to the operating instructions; disassembly, repair or alteration by anyone other than Coleman or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. Warranty void if damage to product results from the use of a part other than a genuine Coleman® part.

COLEMAN SHALL NOT BE LIABLE FOR DEFECTS THAT ARE CAUSED BY THE USE OF UNAUTHORIZED PARTS OR SERVICE. COLEMAN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITIONS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE WARRANTY OR CONDITIONS. SOME STATES, PROVINCES, OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

How to Obtain Warranty Service

Take the product to an authorized Coleman service center. You can find the nearest authorized Coleman service center by visiting www.coleman.com or calling 1-800-835-3278 or TDD 316-832-8707 in the United States or 1 800 387-6161 in Canada. If a service center is not conveniently located, attach to the product a tag that includes your name, address, daytime telephone number and description of the problem. Include a copy of the original sales receipt. Carefully package the product and send either by courier or insured mail with shipping and insurance prepaid to:

For products purchased in the United States:
The Coleman Company, Inc.
3600 North Hydraulic
Wichita, KS 67219

For products purchased in Canada:
Sunbeam Corporation (Canada) Limited
DBA Jarden Consumer Solutions
208 Hereford Street
Brampton (Ontario) L6Y 0M1

The costs of transporting the product to Coleman or an authorized service center for warranty service is the responsibility of the purchaser.

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

DO NOT SHIP WITH THE BATTERIES INSTALLED.

If you have any questions regarding this warranty please call 1-800-835-3278 or TDD 316-832-8707.

U.S. Patent # D487,809

©2008 The Coleman Company, Inc. All rights reserved. Coleman® and  are registered trademarks and the shape of the lantern is a trademark of The Coleman Company, Inc.



2000001145 (20080327)



 
How to Use and Enjoy Your Coleman®

8D RUGGED LED

BATTERY LANTERN

Profitez au maximum de votre
LANTERNE COLEMAN

ROBUSTE, À DEL ET 8 PILES D

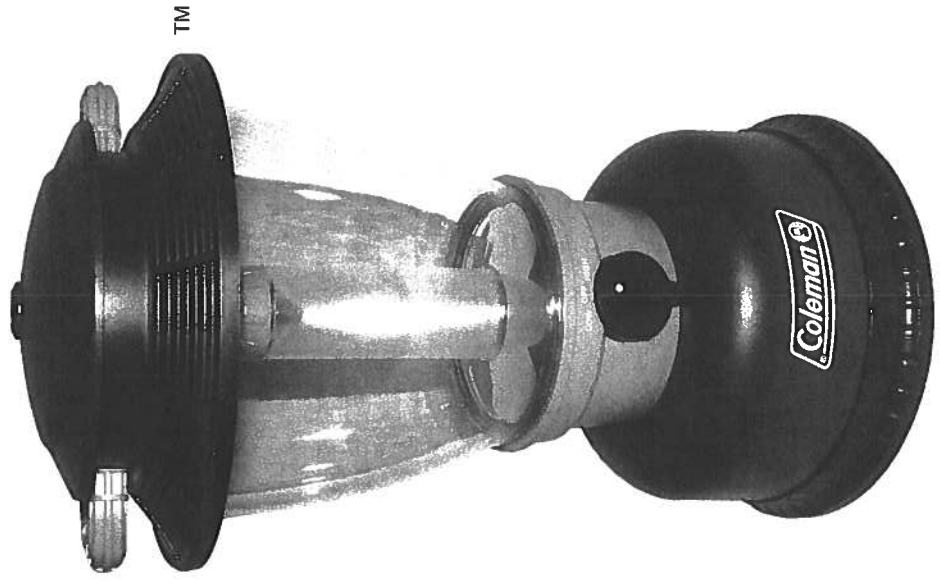

COLEMAN® 8D RUGGED LANTERN / LANTERNE COLEMAN® ROBUSTE, À 8 PILES D

TO INSTALL OR REPLACE BATTERIES

Your new lantern operates on 8 "D" cell batteries. For longest life, use alkaline batteries.

CAUTION: DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE BATTERIES. RESULT COULD LEAD TO OVER-HEATED CIRCUIT AND DAMAGE TO LANTERN.

1. With lantern off, turn upside down and unscrew base by rotating counterclockwise.
2. Install 8 batteries in the correct orientation as shown on the battery housing. Always be careful that all 8 batteries are installed correctly. (Fig. 1.)
3. Replace base by screwing clockwise until hand tight. Check that base is securely installed in closed position.

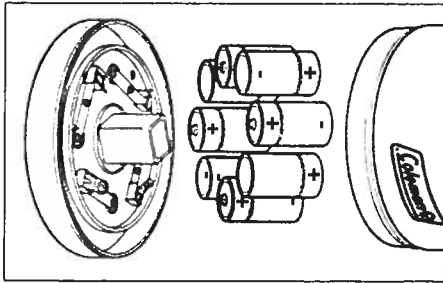 


Fig. 1

MISE EN PLACE OU REMPLACEMENT DES PILES

Votre nouvelle lanterne est alimentée par 8 piles « D ». Les piles alcalines procurent l'autonomie la plus longue.

ATTENTION : N'UTILISEZ PAS EN MÊME TEMPS DES VIEILLES PILES ET DES PILES NEUVES. NE MÉLANGEZ PAS DES PILES ALCALINES, STANDARD (LECLANCHÉ) ET RECHARGEABLES. CECI RISQUERAIT DE FAIRE SURCHAUFFER LE CIRCUIT ET D'ENTRAÎNER L'ENDOMMAGEMENT DE LA LANTERNE.

1. Mettez la lanterne éteinte sens dessus dessous et dévissez la base en la tournant en sens antihoraire.
2. Placez les 8 piles tel qu'illustré, en les orientant exactement tel qu'indiqué dans le logement de piles. Vérifiez toujours que les 8 piles soient correctement placées. (Fig. 1.)
3. Remplacez la base en la vissant en sens horaire, à la main. Assurez-vous qu'elle soit bien vissée et fermée.

THINGS YOU SHOULD KNOW

1. Operating time for this lantern depends on whether it is run continuously or intermittently. Intermittent operation extends the run time of a set of batteries. On a new set of alkaline batteries, approximate run time of up to 66 hours on low and 32 hours on high.
2. The LED is a lifetime light source. It will never need to be replaced.
3. Do not leave discharged batteries in the lantern for an extended period of time as this could permanently damage the lantern.
4. To clean the outside of the lantern and globe, use only a damp cloth and mild dishwashing liquid. Avoid excessive water and strong cleaner which can damage lantern.

RENSEIGNEMENTS ESSENTIELS

1. L'autonomie d'un jeu de piles neuves dépend du mode d'utilisation (continuel ou intermittent) de la lanterne. Le fonctionnement intermittent prolonge l'autonomie. L'autonomie de piles alcalines neuves est d'environ 66 heures à basse intensité et d'environ 32 heures à haute intensité.
2. La luminodiode (DEL) est une source lumineuse qui dure à vie. Elle n'a pas besoin d'être remplacée.
3. Ne laissez pas de piles épuisées dans la lanterne pendant de longues heures. Vous risqueriez d'endommager irrémédiablement la lanterne.
4. N'utilisez qu'un linge humide et du détergent à vaisselle doux pour nettoyer l'extérieur et le globe de la lanterne. Une quantité excessive d'eau et un produit abrasif risqueraient d'endommager la lanterne.

